

Memory stick
slot


Back to the
start button

Move recording
forwards

Play or Pause
button

Move recording
backwards

On/off Small blue light
when on and charged

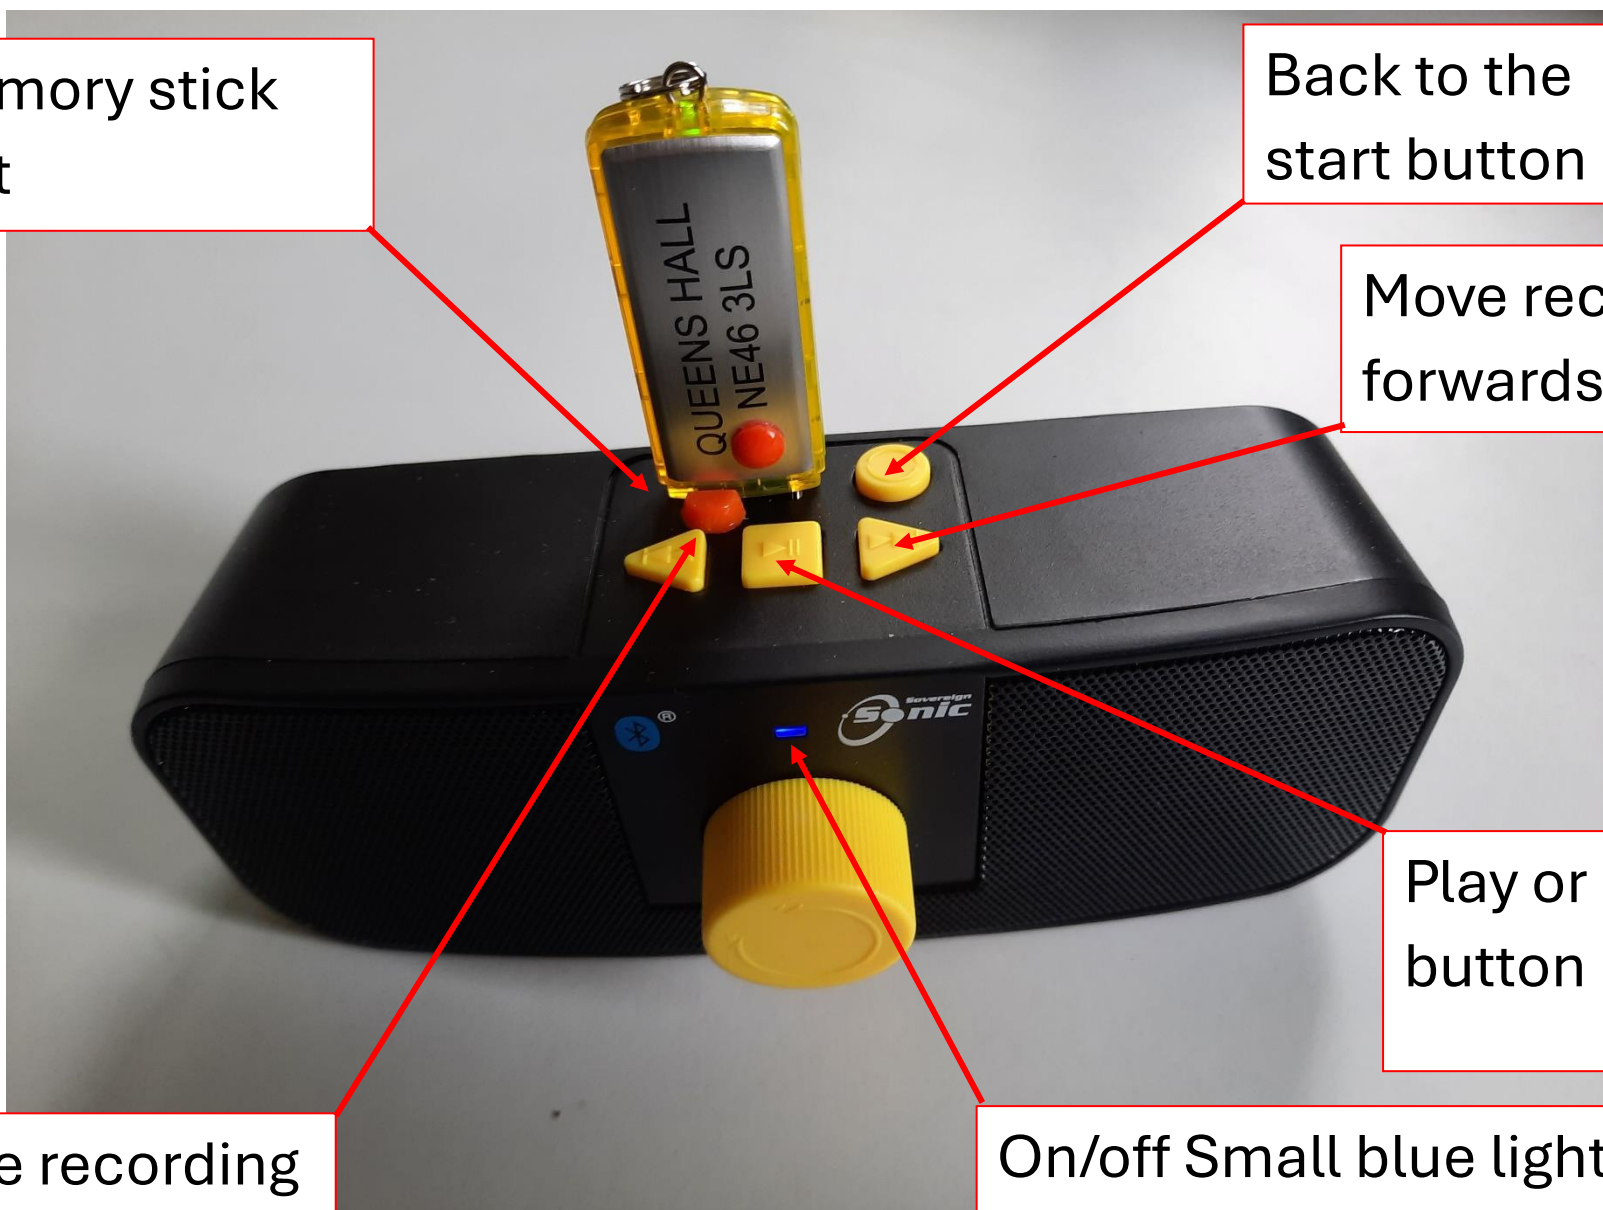

Audioplayer



Memory stick that comes in yellow or red wallet by post every week.

Charger

